

BUCKLE THREADING INSTRUCTIONS

- 1** Feed Narrostrap under the load to be secured before threading the buckle. Form a loop at one end of the Narrostrap. The buckle must be held such that the legs are facing the top and the right hand side.



- 2** Insert the loop through the centre of the buckle from the bottom of the buckle.




- 3** Thread the loop over the rear buckle leg and pull through.



- 4** Tighten the Narrostrap by pulling the strap (not the cut end!).



- 5** Ensure that there is no slack under the load and then form a loop on the other end of the Narrostrap.

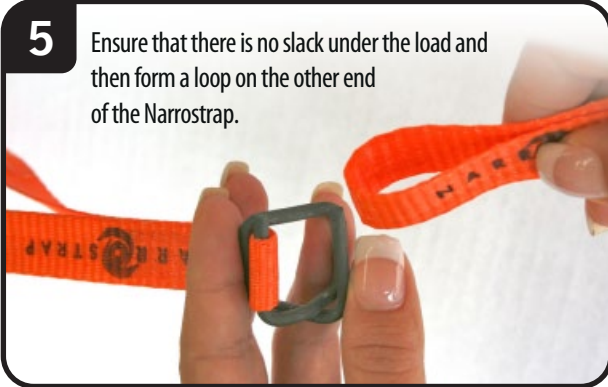

- 6** Insert this loop through the centre of the buckle from the bottom of the buckle.



- 7** Thread this loop over the front buckle leg and pull through.



- 8** Now pull the the tail end of the Narrostrap to complete the threading and to remove any remaining slack under the load.



Narrowtex recommends the use of high quality Narrostrap Phosphate buckles in conjunction with Narrostrap polyester woven strapping

N A R R O  W T E X

Unit 2, 63 Parramatta Road, Underwood, Qld, 4119 • P.O.Box 966, Slacks Creek, Queensland, 4127, Australia
Tel: (07)32904300 • Fax: (07)32904399 • Mobile: 0403755652 • Email: info@narrowtex.com.au

www.narrowtex.com.au